 


# ES1-S User Manual

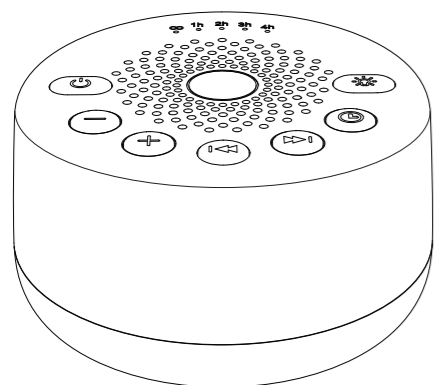

Thank you for purchasing this product. To ensure properly use and trouble-free operation, please read this manual carefully and store it in a safe place for future reference.


## PACKAGE CONTENTS

- 1 X White Noise Machine
- 1 X Power Adapter
- 1 X USB Charging Cable
- 1 X User Manual

## TECHNICAL SPECIFICATIONS

- Input voltage: 5V DC
- Input current: 1000mA
- Standby power : <0.5W
- Operating temperature: 14~122 °F (-10~50°C)
- Please use the original adapter

## PRODUCT OVERVIEW

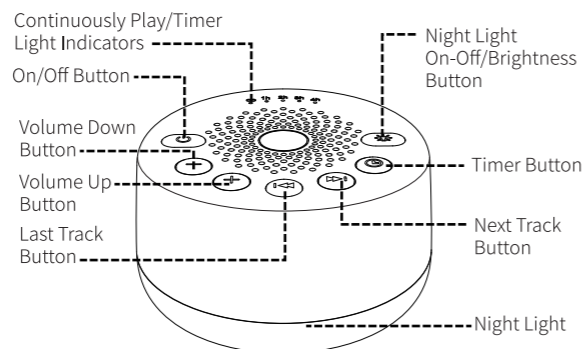

## OPERATING INSTRUCTIONS

### 1. Power On/Off

Short Press the Button to on/off. (Timer light indicator is white means the device is power on, and the device will begin to play sound.)

### 2. Switching Sounds

Press and buttons to switch among all the 25 sounds in sequence.

Track list:

- |                              |                        |
|------------------------------|------------------------|
| 1. Brown Noise               | 2. Pink Noise          |
| 3. Blue Noise                | 4. White Noise         |
| 5. Soft Fan                  | 6. Household Fan       |
| 7. Industrial Fan            | 8. Big Fan             |
| 9. Rain on Yard              | 10. Heavy Rain         |
| 11. Rain on Window           | 12. Stream in the Cave |
| 13. Brook                    | 14. River              |
| 15. Gentle Sea Wave          | 16. Mighty Sea Wave    |
| 17. Little Sea Wave          | 18. Singing Birds      |
| 19. Campfire                 | 20. Train              |
| 21. Piano                    | 22. Brahms Lullabies   |
| 23. Alpha Wave with Dripping | 24. Star Dust          |
| 25. Meditation               |                        |

### 3. Adjusting Volume

 
Press button to increase the volume and button to decrease the volume.

(When adjusting volume button, if the timer light indicator stops flashing, it means the volume comes to the min or the max value.)

### 4. Adjusting Sounds Timer and Night Light Timer

Press button to set the timer. There are a total of 5 timer light indicators which stand for sound and night light continuously play, 1-hour timer, 2-hour timer, 3-hour timer and 4-hour timer respectively.

(Black means the timer light indicator is off and white means the timer light is on.)



### 5. Adjusting Continuously Play and Timer Light Indicators

Press and hold button for more than 2 seconds, then timer light indicators can be manually turned on/off.

### 6. Adjusting Night Light

Short press the button to turn on/off the night light. There are four brightness level in total. Press and hold the button to select a higher brightness level. When the brightness reaches its maximum, keep pressing and holding the button again it would be turned to the minimum brightness.

## FEATURES

### 1. Sound Features

Built with white noise, fan sounds, nature sounds, ambient, Piano, Meditation sounds for your choices.

When the automatic shut-off comes close, the sound will gradually fade out and then turn off. It won't stop immediately, which may awaken you due to instant volume change.

### 2. Memory Feature

The previously set volume level, brightness level, audio track and timer will be remembered when you power on the device again.

(The continuously play and timer light indicators On/Off states would not be remembered when you power on the device again.)

### 3. Auto-Off Feature

When the timer setting completed, the device can be automatically turned off.

### 4. Night Light Features

Night light LED can be manually turned on/off and there are four brightness levels can be select.

## TROUBLE SHOOTING

If the unit has a problem, try to follow the instructions below to solve it.

Problems	Possible causes	Solutions
No sound, and the Continuously Play/Timer light indicators is off	No power supply	Plug the power adapter and connect it to the device via the USB cable
	Improper power adapter is used.	Make sure the original adapter is used.
	Poor contact	Make sure the USB cable is firmly plugged. Make sure the power adapter is powered on.
	Handle standby status	Press the power On/Off button to turn it on.
No sound, but the Continuously Play/Timer light indicators is on	The sound is adjusted too low.	Press the volume "+" button to increase the volume
	Handle standby status	Press the power On/Off button to turn it on

Problems	Possible causes	Solutions
When adjusting the volume to a high level, the device works with unstable sound.	Improper power adapter is used.	Make sure the original power adapter is used.
	Poor contact	Make sure the USB cable is firmly plugged.  Make sure the power adapter is powered on.
	A USB extension cable is used	Connect the device to the power adapter with the original USB cable, do not connect the additional USB extension cables
Other unexpected behaviors	Unknown reasons	Try the "Restore Factory Settings"

## RESTORE FACTORY SETTINGS

Plug the power adapter and connect it to the device via the USB cable, then press and hold down button for more than 5 seconds until all light indicators flash.

## WARRANTY INFORMATION

If you have any product question, or you have any product issues, please contact our e-mail:

Your name: \_\_\_\_\_ Order number: \_\_\_\_\_  
E-mail: \_\_\_\_\_ Phone: \_\_\_\_\_

BETTER FOR YOUR SLEEP

